


IMPERIAL

General installation instructions for Adjustable Rigid Riser

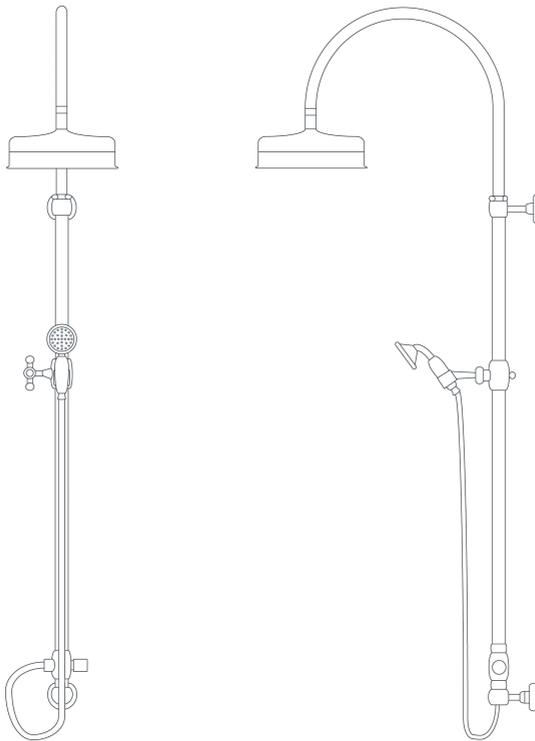

Important Information:

Please check the products for transport damage and that contents are complete before installation.

Consult a qualified plumber if you have any problems installing this product.

Complaints made following installation regarding the above cannot be accepted.

Introduction and General Instructions

Thank you for purchasing this Imperial product.

These bathroom accessories and complements are manufactured under rigorous quality control.

This is a product made with the finest materials. Its metal surfaces have received a protective treatment that ensures its resistance to ambient conditions.

General Instructions

Please take a moment to review this manual before you install your product. If you encounter any installation or performance problems, please do not hesitate to contact us using the phone number listed on the back cover of the booklet.

 Upon receiving your product please open all cartons carefully and inspect for any manufacturing defects or transit damage.

Imperial cannot be held responsible for damaged products after or during their installation.

This installation guide and the fixings provided are intended for fixing into solid walls. If you are installing this product into a stud wall structure or any other type of non solid wall please amend your installation techniques and fixings accordingly.


Tools Required



drill



screwdriver

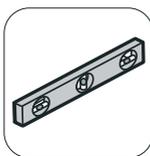


spirit level



pencil

Ensure that you have a clear space in which to work.

After having installed a wall outlet 1/2" M, proceed with the assembling of the shower pipe.

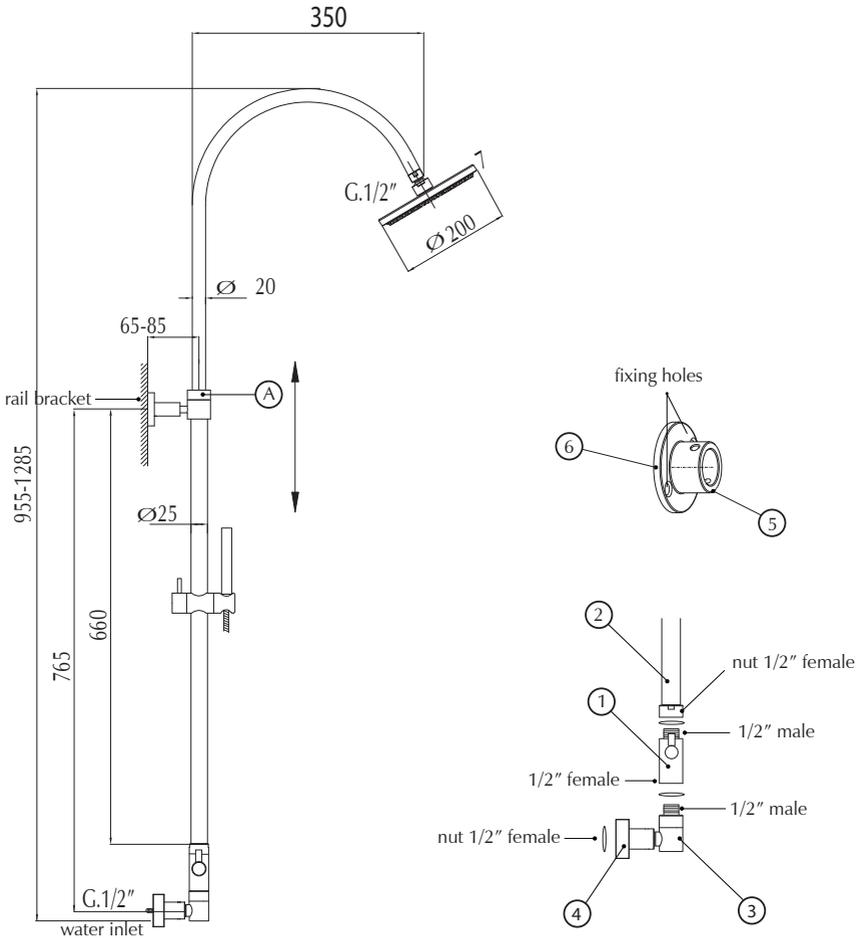

NOTE: Riser pipework MUST not be cut.

Installation Instructions

1. Assemble the diverter (1) to the shower pipe (2) using the 1/2" supplied washer.
2. Assemble the wall bracket (3) to the diverter body and connect the 1/2" nut (4) to the wall.
3. Take the wall bracket (5) and position it to the upper side of the pipe, mark the hole on the wall and fix it with the supplied screws.
4. Cover the wall bracket with the cover plate (6).

Adjust the height of the shower pipe using the nut (A).

NOTE: Riser pipework MUST not be cut.

You have just acquired a high quality bathroom accessory and are about to put it in the most hostile environment in the house! We have been producing these fine products for many years and our experience is that they will give years of pleasurable service if a few simple measures are taken to look after them.

Metal:

Parts with Chrome/Gold finish should be cleaned with a damp soft cloth only.

It is important to dry excess water after use to prevent staining and calcium lime scale build up. Water that is allowed to dry on plated surfaces will stain and damage the plated finish and over a period of time calcium will erode the finish.

Imperial recommends the use of soap and water only for cleaning and ensure that the product is thoroughly dried after with a soft lint free cloth.

Care should be taken with hand gels and mouth wash as they contain alcohol which will burn and tarnish the plated finish.

The use of detergents and abrasive cleaning agents should be avoided as these will cause damage to the finish of the metal.

By adopting Imperial's recommended care and cleaning advice will give many years of pleasure, we hope you enjoy your new bathroom fittings.

IMPERIAL

The Imperial Bathroom Company
England

www.imperial-bathrooms.co.uk

Tel: +44 (0)1922 743074, Fax: +44 (0)1922 743180

Email: sales@imperial-bathrooms.co.uk